



EPCOM syscom

1630 Paisano Dr.
El Paso. Tx 79901.

Ph (915)533-5119
www.epcom.net

SYSCOM

Ave 20 de Noviembre No. 805
Chihuahua, Chih. 31000

Col. Centro

Tel 052 (614) 415 – 2525

www.syscom.mx

K29961503 Channel Selector Knob for KENWOOD Portable Radios TK-2402/3402 & NX-240/340

TK-2402(V)/2402/2406/2407

PARTS LIST

* New Parts. Δ indicates safety critical components.
Parts without Parts No. are not supplied.
Les articles non mentionnés dans le Parts No. ne sont pas fournis.
Teile ohne Parts No. werden nicht geliefert.

L : Scandinavia K : USA P : Canada
Y : PX (Far East, Hawaii) T : England E : Europe
C : China X : Australia M : Other Areas

TK-2402(V) / 2402 / 2406 / 2407
TX-RX UNIT (X57-8310-10)

Ref. No.	Address	New parts	Parts No.	Description	Desti-nation	Ref. No.	Address	New parts	Parts No.	Description	Desti-nation
TK-2402(V) / 2402 / 2406 / 2407						TX-RX UNIT (X57-8310-10)					
1	1A	*	A02-4200-03	PLASTIC CABINET ASSY		VR1	2B		R31-0670-25	VARIABLE RESISTOR	
2	3A	*	A10-4170-01	CHASSIS		S1	2B	*	S60-0450-05	ROTARY SWITCH	
4	2C	*	B09-0758-03	CAP(EXT SP/MIC) ACCESSORY		56	1A	*	T07-0805-05	SPEAKER	
6	1B	*	B43-1686-04	BADGE(FRONT)		57	2D		T90-1036-15	HELICAL ANTENNA ACCESSORY	K,K1,P
7	1B	*	B43-1687-04	BADGEREAR		58	1D		W08-1247-25	AC ADAPTER ACCESSORY	K,K1
8	1C	*	B62-2479-00	INSTRUCTION MANUAL ACCESSORY	K,K1,P	59	1D		W08-1249-35	CHARGER ACCESSORY	K,K1
8	1C	*	B62-2480-00	INSTRUCTION MANUAL ACCESSORY	M	58	1D	*	W08-1326-05	AC ADAPTER ACCESSORY	P
8	1C	*	B62-2481-00	INSTRUCTION MANUAL ACCESSORY	M1	58	1D	*	W08-1327-05	AC ADAPTER ACCESSORY	M1
9	1A		D10-0649-03	LEVER		59	1D	*	W08-1331-05	CHARGER ACCESSORY	M1,P
10	1A		D21-0863-04	SHAFT		TX-RX UNIT (X57-8310-10)					
11	1A		D32-0441-13	STOPPER		D601			B30-2314-05	LED(GREEN)	
12	1B	*	D32-0456-03	STOPPER(SEL) ACCESSORY		D602			B30-2315-05	LED(RED)	
13	2B		E04-0477-15	RF COAXIAL RECEPTACLE(SMA)		D604			B30-1790-05	LED(BLUE)	
14	3B		E23-1253-14	TERMINAL(GROUND)		C1 ,2			CK73HB1H102K	CHIP C 1000PF	K
15	2A	*	E23-1395-04	TERMINAL(+VE)		C3 ,4			CC73HCH1H101J	CHIP C 100PF	J
16	2B		E37-1288-05	PARALLEL CORD		C5			CK73HB1H102K	CHIP C 1000PF	K
20	1A		G01-4542-04	COIL SPRING(LEVER)		C6			CC73HCH1H101J	CHIP C 100PF	J
21	1A		G01-4543-14	COIL SPRING(STOPPER)		C7			CC73HCH1H100B	CHIP C 10PF	B
22	2B		G10-1348-04	FIBROUS SHEET(X57-1C)		C8			CK73HB1E103K	CHIP C 0.010UF	K
24	2B		G11-4465-04	RUBBER SHEET(Q208)		C9			CC73HCH1H101J	CHIP C 100PF	J
25	3B		G13-2009-04	CUSHION(CHASSIS)		C11			CC73HCH1H100B	CHIP C 10PF	B
26	3B		G13-2033-04	CUSHION(GROUND)		C13			CC73HCH1H101J	CHIP C 100PF	J
27	3B		G13-2034-14	CUSHION(CHASSIS)		C14			CK73HB1A104K	CHIP C 0.10UF	K
28	2A		G13-2038-34	CUSHION(CHASSIS GROUND)		C15 -17			CK73HB1E103K	CHIP C 0.010UF	K
29	3A		G13-2039-24	CUSHION(X57)		C18			CK73HB1H102K	CHIP C 1000PF	K
30	2A		G13-2107-04	CUSHION(X57,SP)		C19			CK73HB1E103K	CHIP C 0.010UF	K
31	3A		G53-1604-03	PACKING(CHASSIS)		C21 ,22			CK73HB1H102K	CHIP C 1000PF	K
32	2B	*	G53-2215-03	PACKING(SP/MIC)		C23			CK73HB1E103K	CHIP C 0.010UF	K
33	2A	*	G53-2216-03	PACKING(SP)		C25			CS77MA1VR22M	CHIP TNTL 0.22UF	35WV
34	2B	*	G53-2217-02	PACKING(VOL/SEL)		C26			CS77MA1C2R2M	CHIP TNTL 2.2UF	16WV
35	3A	*	G53-2218-03	PACKING(+VE)		C27 ,28			CK73HB1H102K	CHIP C 1000PF	K
41	2C	*	H12-4319-05	PACKING FIXTURE	K,K1,M1,P	C29			C93-1906-05	PLASTIC FILM 1000PF	J
42	3C	*	H52-2589-01	ITEM CARTON CASE	K,K1,M1,P	C30			CK73HB1H271K	CHIP C 270PF	K
43	2C	*	J19-5577-03	HOLDER(SP/MIC) ACCESSORY		C32			CK73HB1H471K	CHIP C 470PF	K
44	2A	*	J19-5578-02	HOLDER(SP)		C33			CK73HB1E103K	CHIP C 0.010UF	K
45	3A	*	J19-5579-03	HOLDER(+VE)		C34			CK73HB1A104K	CHIP C 0.10UF	K
46	3A	*	J19-5580-03	HOLDER ASSY		C35			CC73HCH1H090B	CHIP C 9.0PF	B
47	2C	*	J29-0734-15	BELT CLIP ACCESSORY							
48	2B	*	J82-0128-05	FPC(VOL/SEL)							
49	1A	*	J99-0779-04	ADHESIVE SHEET(PTT)							
51	1A	*	K29-9612-03	BUTTON KNOB(PTT)							
52	1A	*	K29-9613-03	BUTTON KNOB(PF)							
53	1A	*	K29-9614-03	KNOB(VOLUME)							
54	1A	*	K29-9615-03	KNOB(SELECTOR)							



