

HELIAX® Cable	EZfir® Connectors	Universal Hand Prep Tool	Drill Tool for HELIAX AL	Drill Tool for HELIAX CU	Wrenches: Back Nut/ Front Nut
<b>1/2" Superflexible</b>					
<b>SFX-500</b> HELIAX AL  <b>LDF2</b> HELIAX CU	<b>SFX EZfir® Series</b> SFXEZNMR, SFXEZNMF, SFXEZDM, SFXEZDF, SFXEZNMR, SFXEZDMR, 	<b>SFX-HPT</b> The SFX hand prep tool removes jacketing, cores foam and flares sheath for easy connector attachment. Includes bits for SFX-500 and LDF2 series cables. Drill not required. 	<b>SFX-EZPT</b> Drill driven tool removes jacketing, cores foam and flares sheath. Speeds connector attachment. For SFX-500 cable only. Supplied with T- handle for hand use. 	<b>Drill Tool not available for LDF2</b>	<b>EZW-7812</b> Combination Wrench  <b>TW-SFX-EZFC</b> Torque Wrench 
<b>1/2"</b>					
<b>FXL-540</b> HELIAX AL  <b>LDF4</b> HELIAX CU	<b>540 EZfir® Series</b> 12EZDF, 12EZDM, 12EZDMR, 12EZNMF, 12EZNMR, 12EZNMR 	<b>12-HPT</b> The 1/2 inch hand prep tool removes jacketing, cores foam and flares sheath for easy connector attachment. Includes bits for FXL-540 and LDF4 cables. Drill not required. 	<b>540-EZPT</b> Drill driven tool removes jacketing, cores foam and flares sheath. Speeds connector attachment. For FXL-540 cable only. Supplied with T- handle for hand use. 	<b>L4-EZPT</b> Drill driven tool removes jacketing, cores foam and flares sheath. Speeds connector attachment. For LDF4 cable only. Supplied with T- handle for hand use. 	<b>EZW-7812</b> Combination Wrench  <b>TW-12-EZFC</b> Torque Wrench 
<b>7/8"</b>					
<b>FXL-780</b> HELIAX AL  <b>AVA5</b> HELIAX CU	<b>780 EZfir® Series:</b> 78EZDF, 78EZDM, 78EZNMF, 78EZNMR 	<b>78-HPT</b> The 7/8 inch hand prep tool removes jacketing, cores foam and flares sheath for easy connector attachment. Includes bits for FXL-780 and AVA5 series cables. Drill not required. 	<b>780-EZPT</b> Drill driven tool removes jacketing, cores foam and flares sheath. Speeds connector attachment. For FXL-780 cable only. Supplied with T- handle for hand use. 	<b>A5-EZPT</b> Drill driven tool removes jacketing, cores foam and flares sheath. Speeds connector attachment. For AVA5 cable only. Supplied with T- handle for hand use. 	<b>EZW-7812</b> Combination Wrench  <b>TW-78-EZFC</b> Torque Wrench 
<b>1-1/4"</b>					
<b>FXL-1480</b> HELIAX AL  <b>AVA6</b> HELIAX CU	<b>1480 EZfir® Series:</b> 114EZDF, 114EZDM, 114EZNMF, 114EZNMR 	<b>114-HPT</b> The 1-1/4 inch hand prep tool removes jacketing, cores foam and flares sheath for easy connector attachment. Includes bits for FXL-1480 and AVA6 series cables. Drill not required. 	<b>1480-PT</b> Drill driven tool removes jacketing, cores foam and flares sheath. Speeds connector attachment. For FXL-1480 cable only. 	<b>A6-EZPT</b> Drill driven tool removes jacketing, cores foam and flares sheath. Speeds connector attachment. For AVA6 cable only. Supplied with T- handle for hand use. 	<b>1480-AW</b> 1-3/4" (45 mm) Wrench  <b>TW-114-EZFC</b> Torque Wrench 
<b>1-5/8"</b>					
<b>FXL-1873</b> HELIAX AL  <b>AVA7</b> HELIAX CU	<b>1873 EZfir® Series:</b> 158EZDF, 158EZDM, 158EZNMF, 158EZNMR 	<b>158-HPT:</b> The 1-5/8 inch hand prep tool removes jacketing, cores foam and flares sheath for easy connector attachment. Includes bits for FXL-1873 and AVA7 series cables. Drill not required. 	<b>FXL/CR 1873-PT</b> Drill driven tool removes jacketing, cores foam and flares sheath. Speeds connector attachment. For FXL-1873 cable only. 	<b>A7-EZPT</b> Drill driven tool removes jacketing, cores foam and flares sheath. Speeds connector attachment. For AVA7 cable only. Supplied with T- handle for hand use. 	<b>1873-AW</b> 2-3/8" (60 mm) Wrench  <b>TW-158-EZFC</b> Torque Wrench 