



# JDMW-1200

## Bracket for parabolic antenna 1,2 m

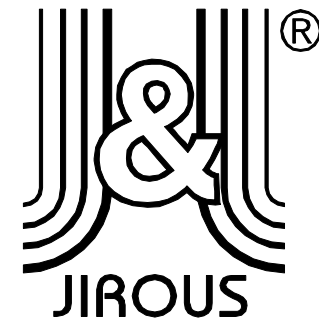


www.jirous.com

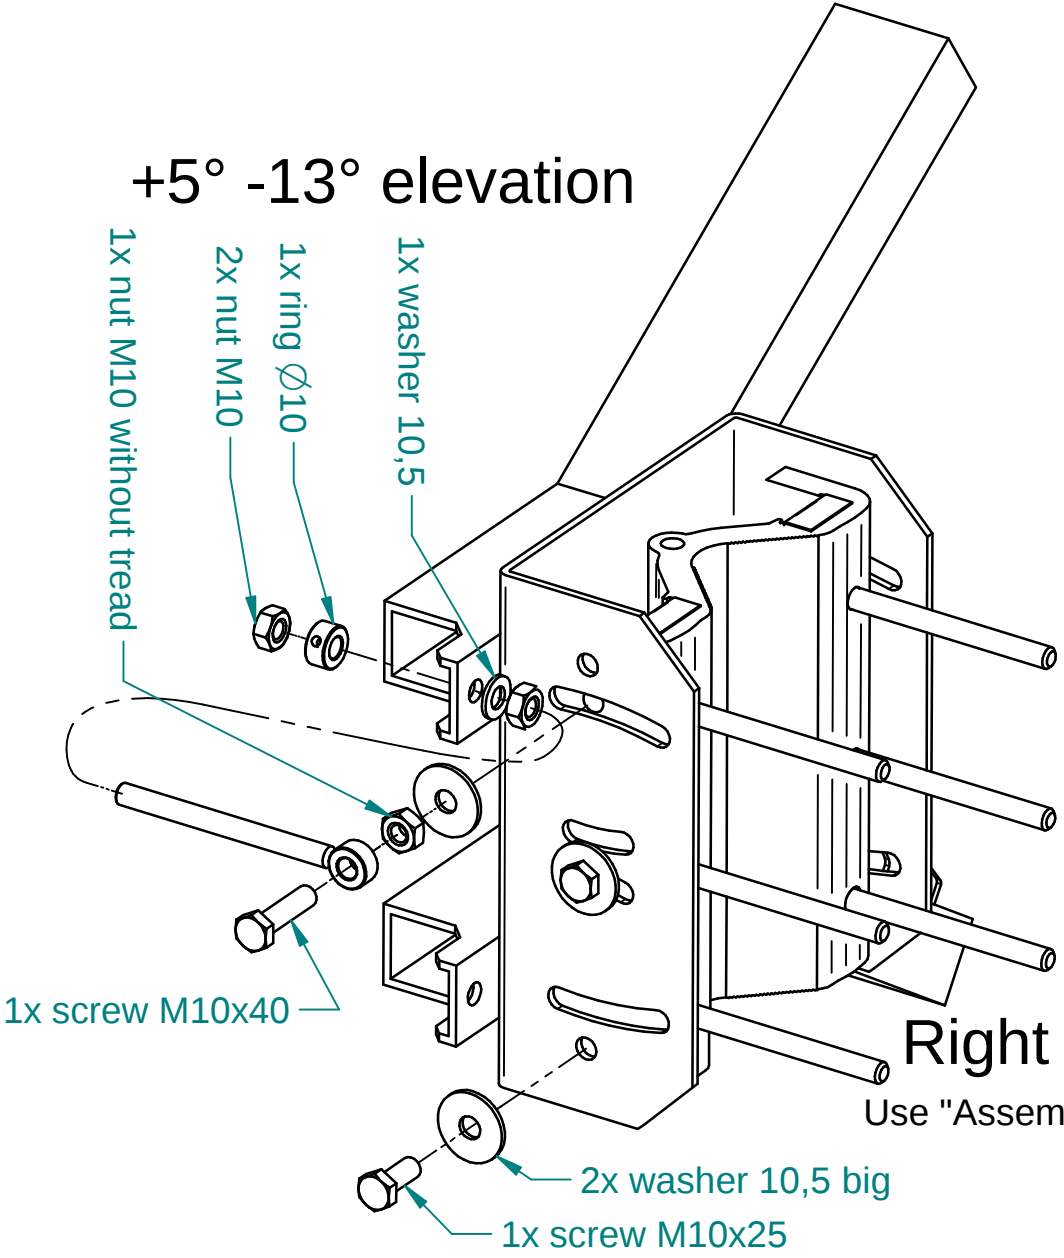


### Right site installation

Use "Assembling material 1200 A"

### +13° -5° elevation

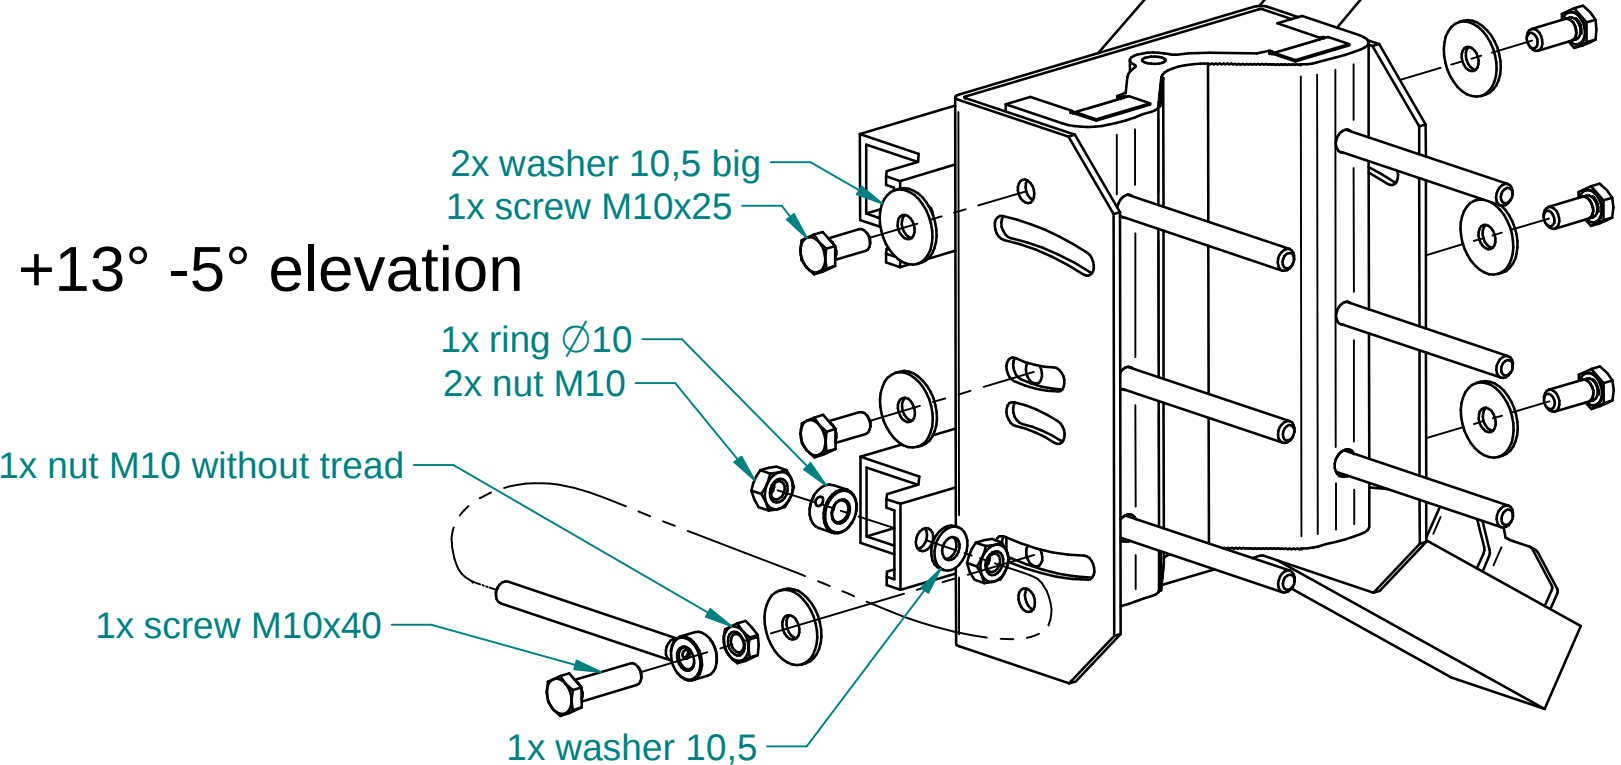



### 1. step on mast

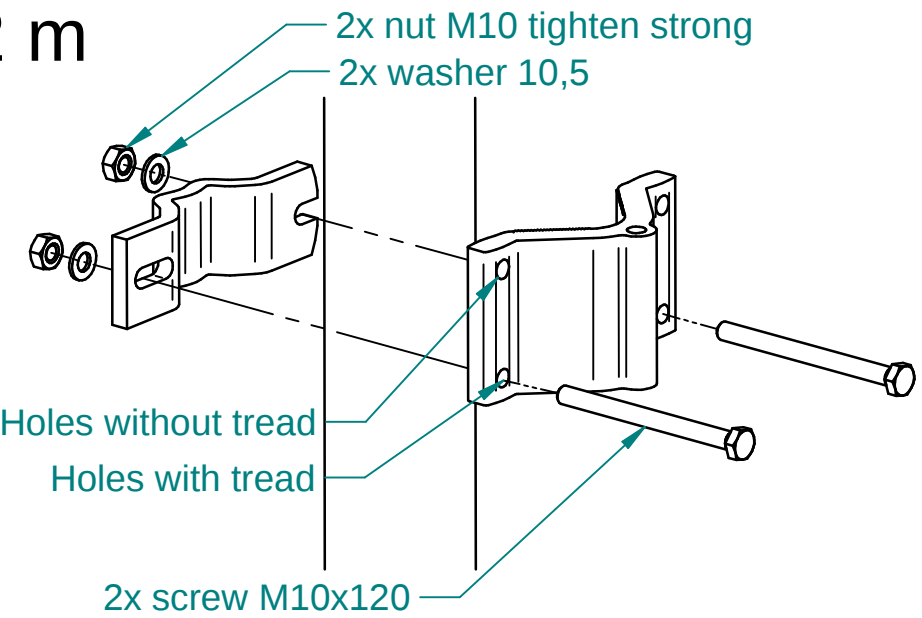


Use part of "Assembling material 1200 B"

### 2. step on mast

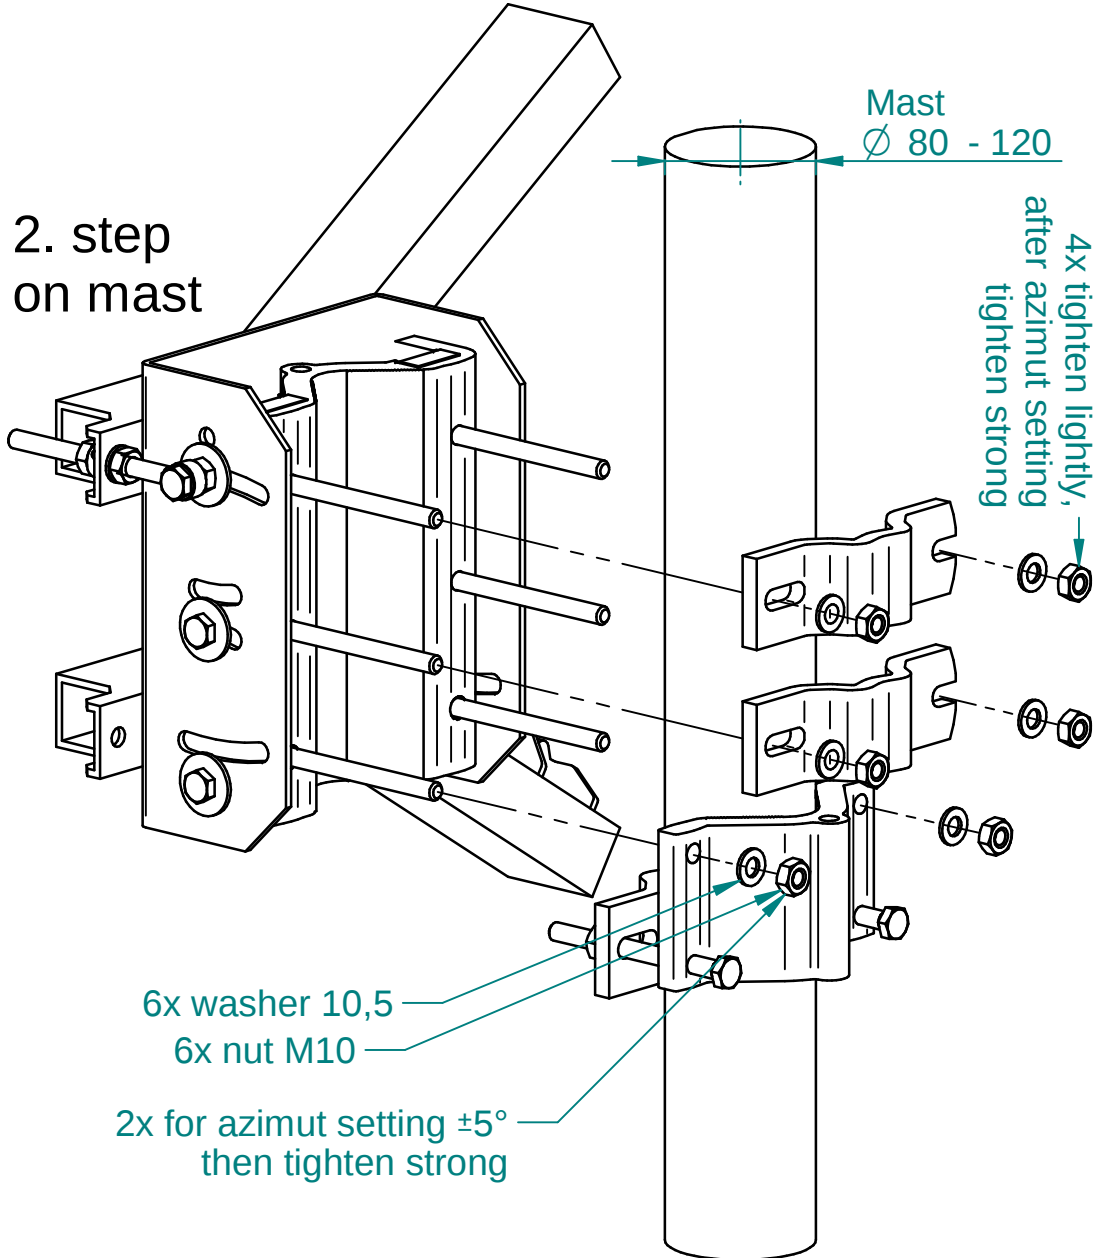

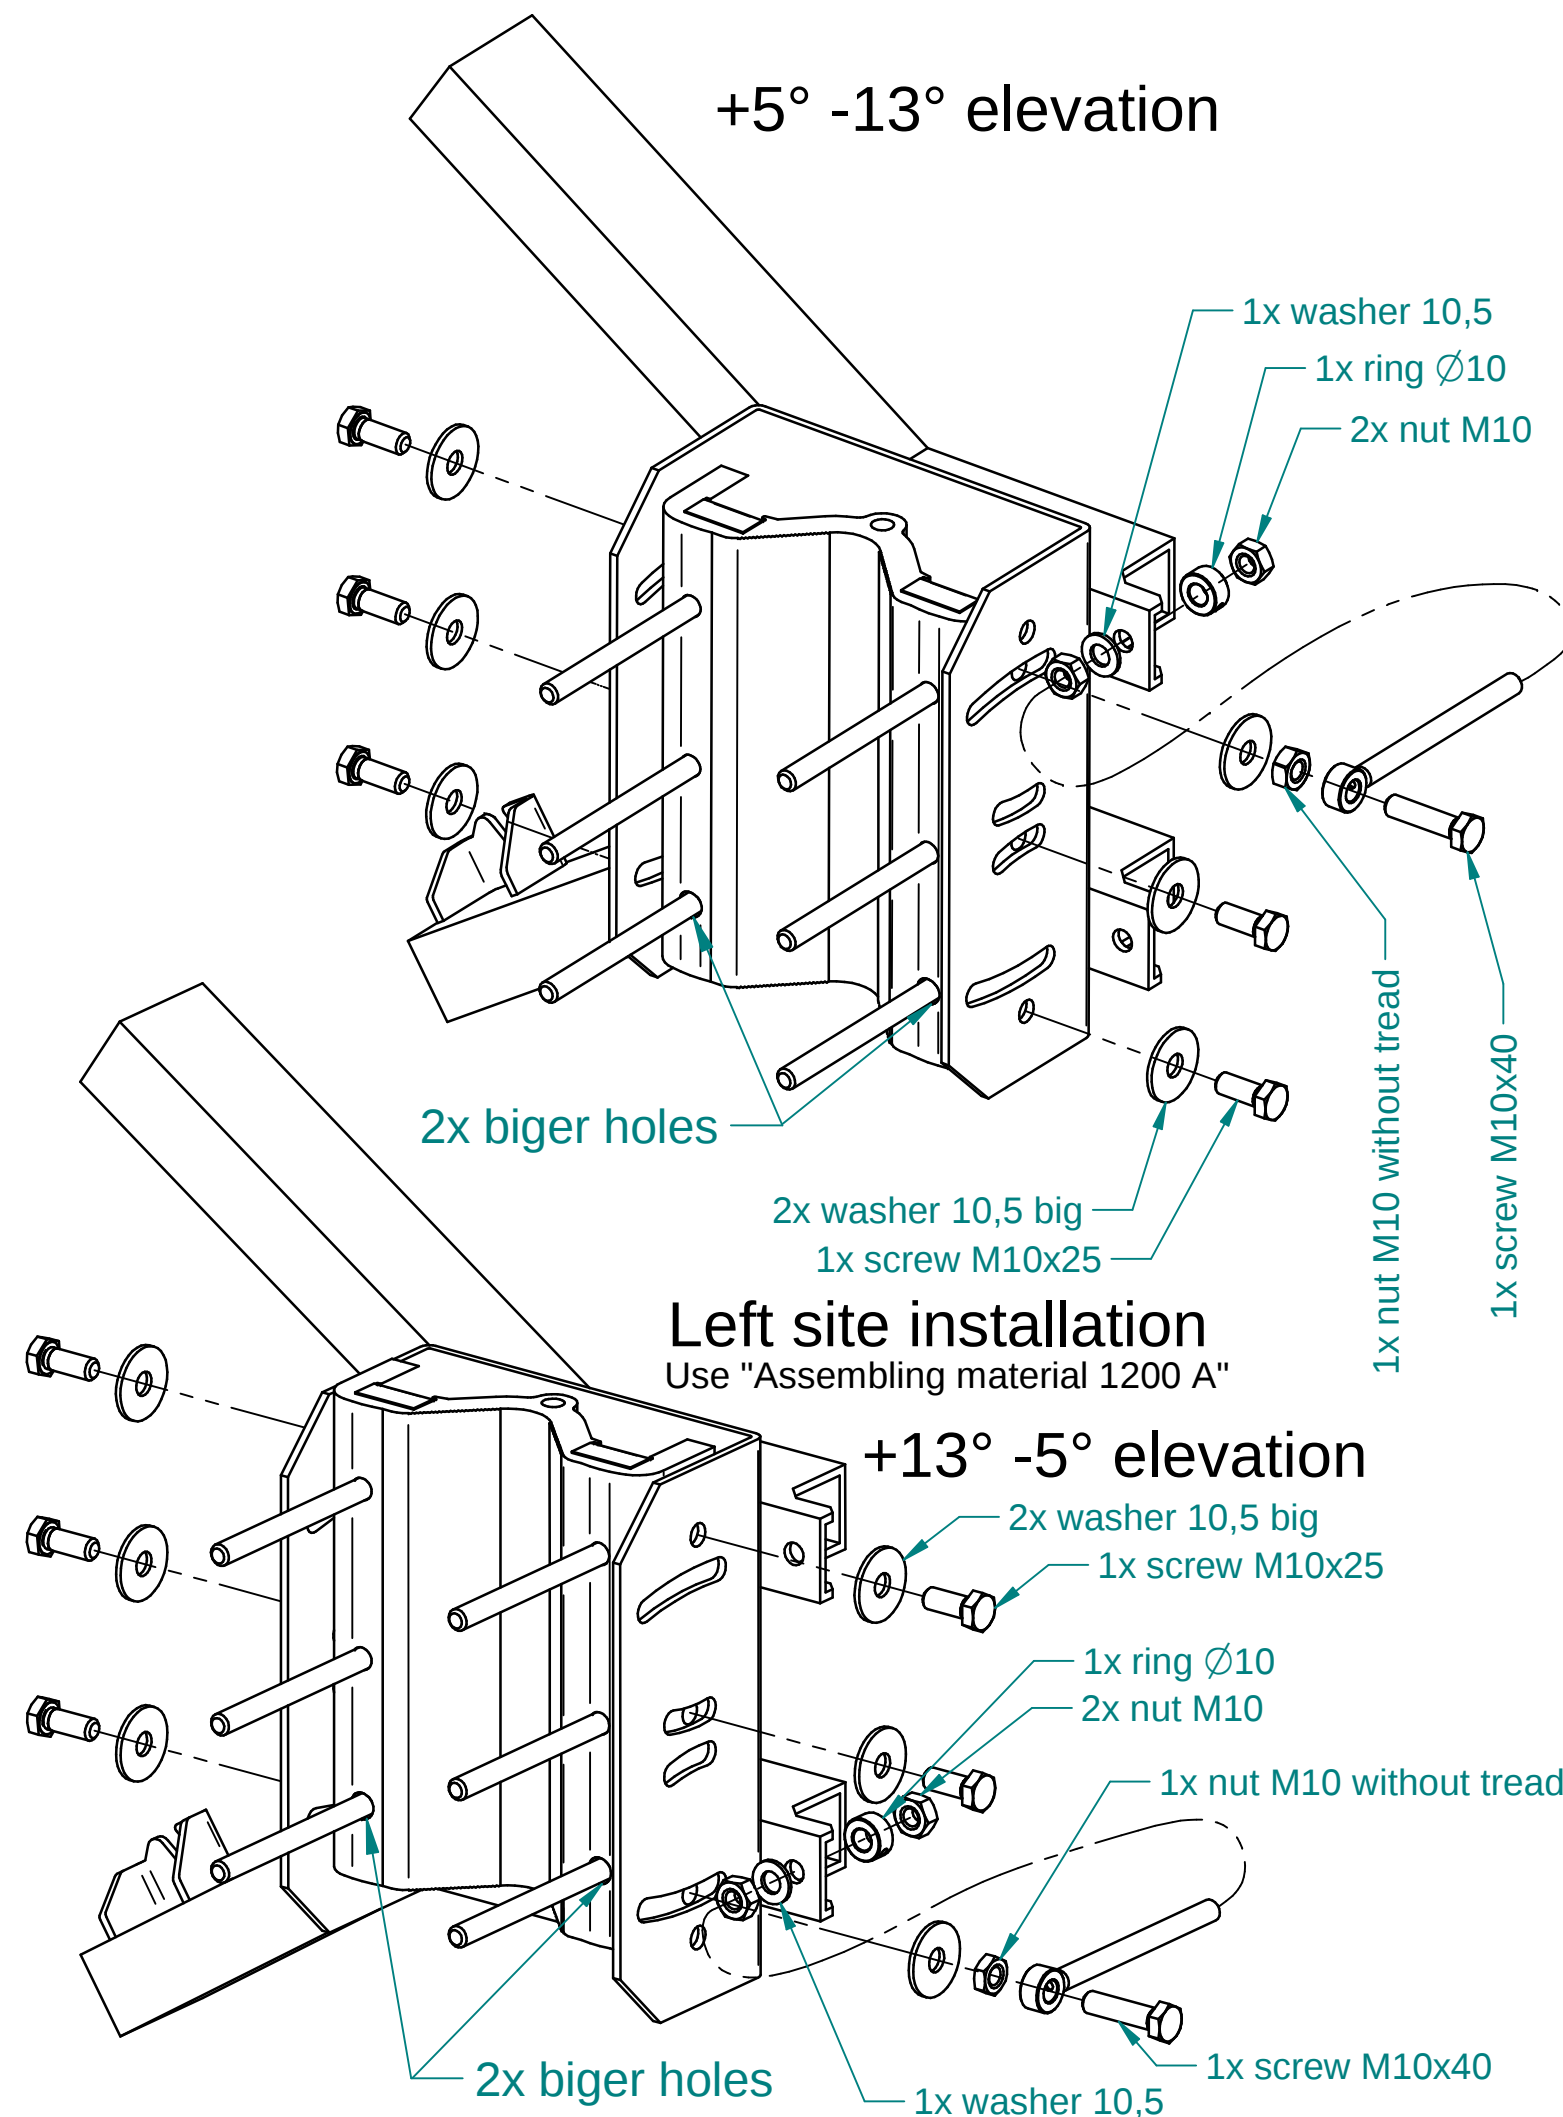

## Instalation at Ø 60 - 80 mm tube

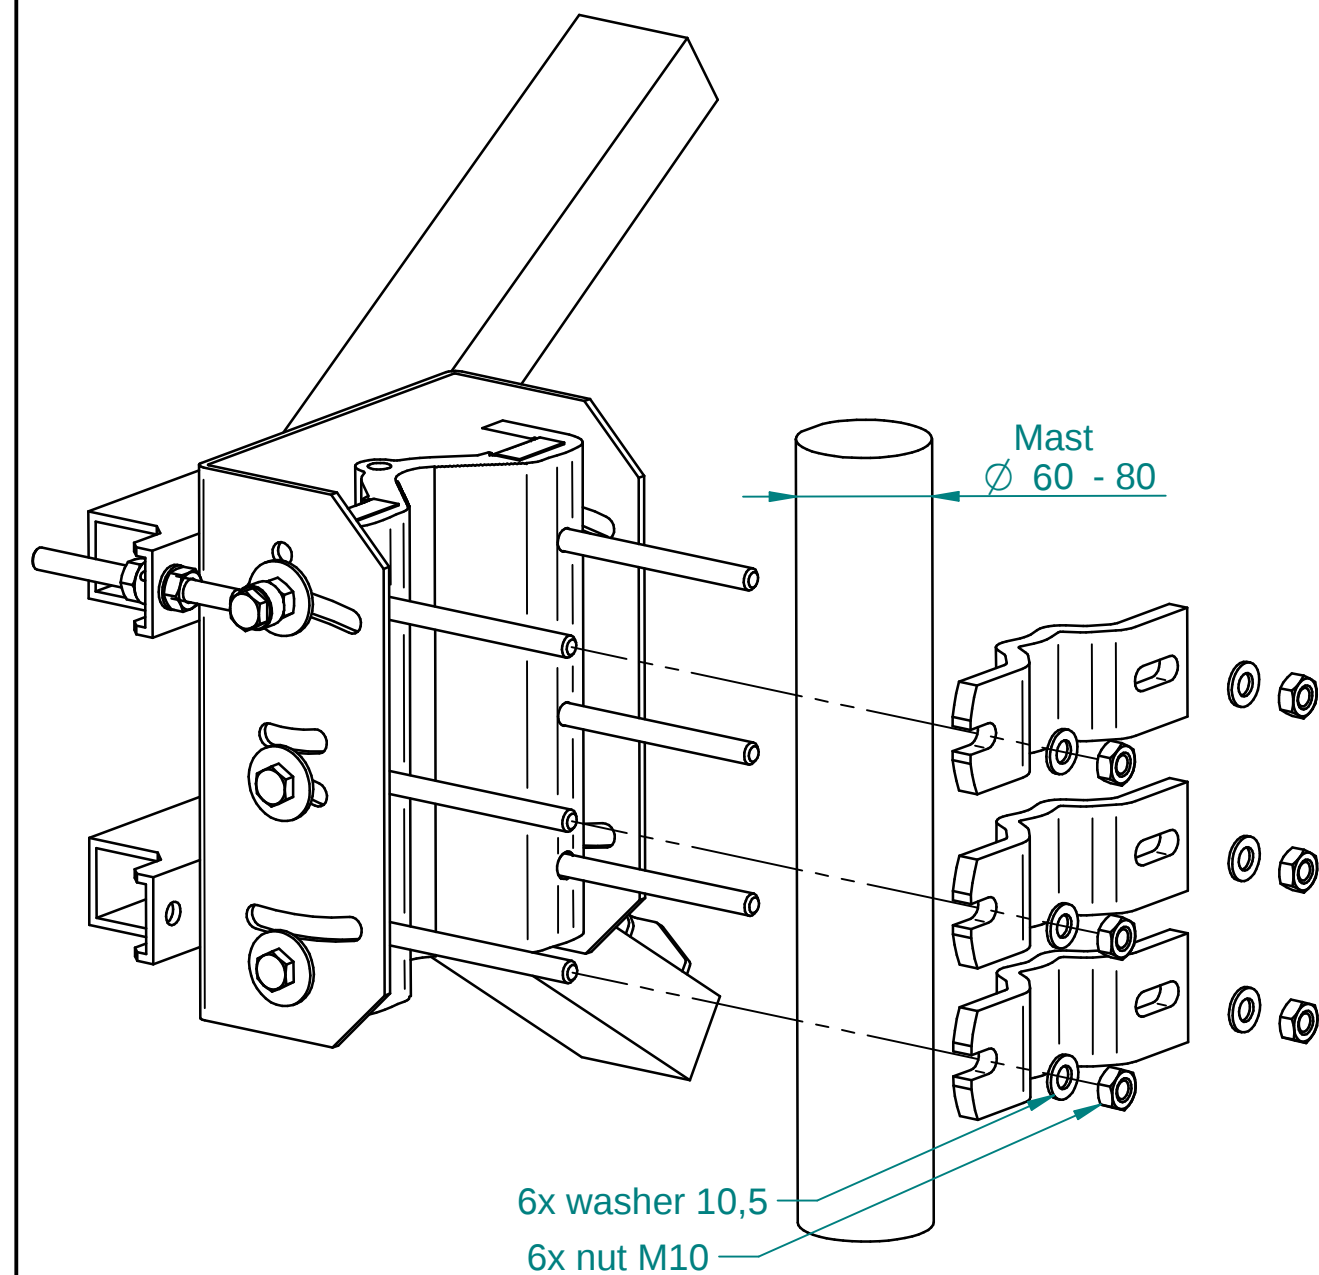

Use part of "Assembling material 1200 B"

For instalation at ø 60 - 80 tube we recomend to use adjustable wind bracing set.